


LOGIC™ 4X36

User Manual

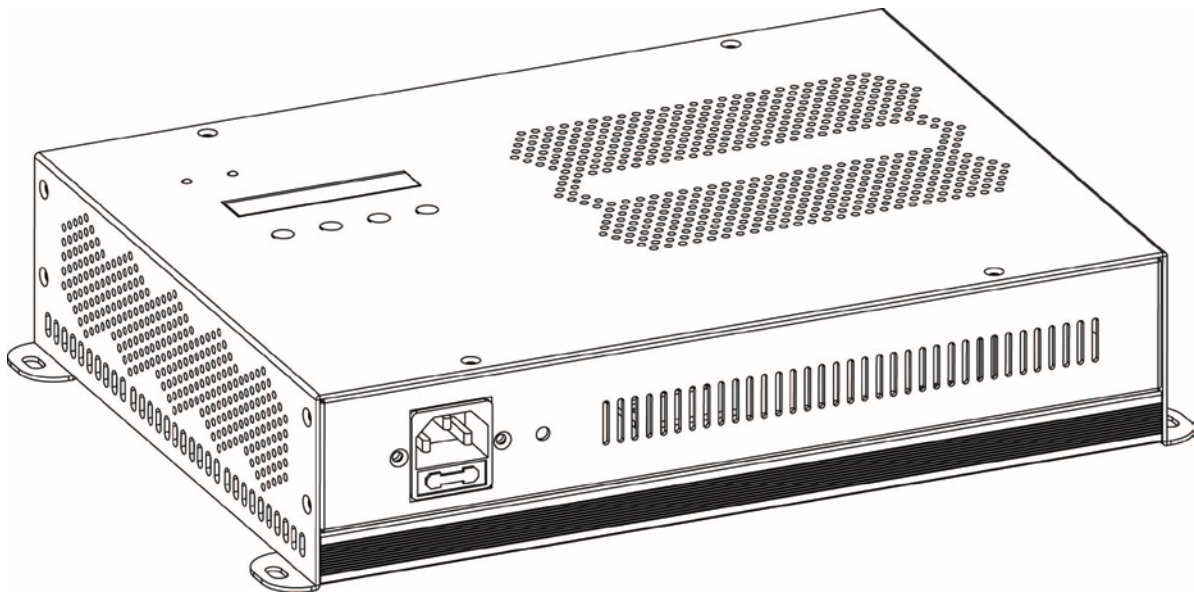

ILUMINARC®

Edition Notes

The LQGIC™ 4X36 User Manual Rev. 10 covers the description, safety precautions, installation, programming, operation, and maintenance of the LQGIC™ 4X36. ILUMINARC® released this edition of the LQGIC™ 4X36 User Manual Rev. 10 in May 2013.

Trademarks

The ILUMINARC® logo, the ILUMINARC® name, and all other trademarks in this document related to services or products by ILUMINARC® are trademarks owned or licensed by ILUMINARC®, its affiliates, or subsidiaries. Any other product names, logos, brands, company names, or trademarks featured or referred to within this document are the property of their respective trademark holders.

Copyright Notice

The entire content of this document, except where applicable and unless otherwise noted, is solely owned by ILUMINARC®, a wholly owned trademark of CHAUVET & Sons Inc.

© Copyright 2013 ILUMINARC®

All rights reserved.

Electronically published by ILUMINARC® in the United States of America.

Manual Usage

ILUMINARC® authorizes its customers to download and print this manual for professional information purposes only. ILUMINARC® expressly prohibits the usage, copy, storage, distribution, modification, or printing of this manual or its content for any other purpose without its written consent.

Document Printing

For better results, print this document in color, on letter size paper (8.5 x 11 inches), double sided. If using A4 paper (210 x 297 mm), configure your printer to scale the content of this document to A4 paper.

Intended Audience

Any person in charge of installing, operating, and/or maintaining the LQGIC™ 4X36 should read the Guide that shipped with it and this manual in their entirety before installing, operating, or maintaining this product.

Disclaimer

ILUMINARC® believes that the information contained in this manual is accurate in all respects. However, ILUMINARC® assumes no responsibility for any error or omissions in this document. ILUMINARC® reserves the right to revise this document and to make changes from time to time in the content hereof without obligation of ILUMINARC® to notify any person or company of such revision or changes. This does not constitute in any way a commitment by ILUMINARC® to make such changes. ILUMINARC® may issue a revision of this manual or a new edition of it to incorporate such changes.

Document Revision

The LQGIC™ 4X36 User Manual Rev. 10 supersedes all previous versions of this manual. Please discard any older versions of this manual you may have, whether in printed or electronic format, and replace them with this version.

Table of Contents

| | |
|--|-----------|
| 1. Introduction | 1 |
| What is Included | 1 |
| Unpacking Instructions | 1 |
| Text Conventions | 1 |
| Safety Notes | 2 |
| Personal Safety | 2 |
| Mounting and Installation | 2 |
| Power and Wiring | 2 |
| Operation | 2 |
| 2. Product Description | 3 |
| Features | 3 |
| Additional Features | 3 |
| Product Overview | 4 |
| 3. Installation | 5 |
| AC Power | 5 |
| Power Consumption | 5 |
| AC Plug | 5 |
| Fuse Replacement | 5 |
| DMX Linking | 6 |
| DMX Modes | 6 |
| Master/Slave Linking | 6 |
| LQIC™ 4X36 Product Linking | 7 |
| Maximum Output Line Loading | 8 |
| Cable Connections | 9 |
| Mounting | 10 |
| Orientation | 10 |
| Installation | 10 |
| Procedure | 10 |
| 4. Operation | 11 |
| Control Panel Description | 11 |
| Control Options | 11 |
| Programming (RGB Mode) | 11 |
| Mode Selection | 11 |
| DMX Addressing | 11 |
| DMX Personality | 11 |
| Master/Slave | 12 |
| Static Colors | 12 |
| Auto Play | 12 |
| Custom Play | 12 |
| Edit Custom | 12 |
| RGB to White Setting | 12 |
| Whites Setting | 13 |
| Set Time and Date | 13 |
| Set Schedule | 13 |
| Playing Schedule | 13 |
| Password | 13 |
| Upload Customs | 13 |
| Reset | 13 |
| Programming (SpectraWhite™ Mode) | 14 |
| Mode Selection | 14 |
| DMX Addressing | 14 |
| DMX Personality | 14 |
| Master/Slave | 14 |
| Static Colors | 14 |
| Auto Play | 14 |

| | |
|---------------------------------------|-----------|
| Whites Setting | 15 |
| Set Time and Date | 15 |
| Set Schedule | 15 |
| Playing Schedule | 15 |
| Password | 15 |
| Reset | 15 |
| Menu Options RGB Mode | 16 |
| Menu Options SpectraWhite™ Mode | 18 |
| DMX Values RGB Mode | 19 |
| EFFECT | 19 |
| DMX Values RGB Mode (Cont.) | 20 |
| RGB | 20 |
| RGB + D | 20 |
| RGB + DMS | 20 |
| RGB + LINE | 20 |
| RGB + LINE + DMS | 21 |
| SOLID | 21 |
| DMX Values SpectraWhite™ Mode | 22 |
| STUDIO W | 22 |
| STUDIO W+D | 22 |
| STUDIO 1 | 22 |
| STUDIO 2 | 22 |
| SOLID | 22 |
| 5. Technical Information | 23 |
| System Maintenance | 23 |
| Product Repairs | 23 |
| Troubleshooting Guide | 24 |
| LED Disclaimer | 25 |
| LED Life | 25 |
| LED Binning | 25 |
| Color Rendering Index (CRI) | 25 |
| Returns Procedure | 26 |
| Claims | 26 |
| Contact Us | 26 |
| Technical Specifications | 27 |

1. Introduction



This icon indicates useful, although non-critical information.



This icon indicates important installation or configuration information. Failure to comply with this information may prevent the product from functioning correctly.



This icon indicates critical installation, configuration, or operation information. Failure to comply with this information may render the product partially or completely inoperative, damage third-party equipment, or cause harm to the user.



The term “DMX” used throughout this document refers to the USITT DMX512-A transmission protocol.

What is Included

- One LOGIC™ 4X36
- One RJ-45 to 3-pin DMX male adapter (input)
- One RJ-45 to 3-pin DMX female adapter (output)
- Four RJ-45 coupler
- One Power Cord
- Warranty Card
- Quick Start Guide

Unpacking Instructions

Immediately upon receiving a product from ILUMINARC®, carefully unpack the carton. Check the contents of the box to ensure that all parts are present and that they are in good condition. If any part appears damaged from shipping, or if the carton shows signs of mishandling, see the *Claims* section in the *Technical Information* chapter.

Text Conventions

| Convention | Meaning |
|---------------------------|--|
| 1~512 | A range of values in the text |
| 50/60 | A set of mutually exclusive values in the text |
| “ILUMICON UM” | The name of another publication or manual |
| <SET> | A button on the products control panel |
| Settings | A product function or a menu option |
| MENU > Settings | A sequence of menu options |
| 1~10 | A range of menu values from which to choose in a menu |
| Yes/No | A set of two mutually exclusive menu options in a menu |
| ON | A unique value to enter or select in a menu |



There are no user serviceable parts inside this product. Any reference to servicing it you may find from now on in this User Manual will only apply to properly ILUMINARC® certified technicians. Do not open the housing or attempt any repairs unless you are certified to do so.



Please refer to all applicable local codes and regulations for the proper installation of this product.



Keep this manual for future consultation. If you sell this product to another user, make sure that they also receive this manual.



In the unlikely event that your LQIC™ 4X36 may require service, please contact ILUMINARC® Technical Support.

Safety Notes

Please read all the following safety notes carefully because they include important information on how to install, use, and maintain this product safely.

Personal Safety

- Avoid direct eye exposure to the light source while the product is on.
- Always disconnect this product from its power source before servicing.
- Always connect this product to a grounded circuit to avoid the risk of electrocution.

Mounting and Installation

- This product is for indoor use only! To prevent risk of fire or shock, do not expose this product to rain or moisture.
- Make sure there are no flammable materials close to this product while operating.

Power and Wiring

- Always make sure that you are connecting this product to the proper voltage, as per the specifications in this manual or on the product's sticker.
- Never connect this product to a dimmer pack.
- Make sure that the power input cable is not cracked, crimped, or damaged.
- Never disconnect this product by pulling or tugging on the power input cable.

Operation

- The maximum ambient temperature (Ta) is 104° F (40° C). Do not operate this product at a higher temperature.
- In case of a serious operating problem, stop using this product immediately!

2. Product Description

The LQIGIC™ 4X36 unit is the power supply and control for the LQIGIC™ series of devices.

The LQIGIC™ 4X36 consists of seven (7) personalities for the RGB mode and five (5) personalities for the SpectraWhite™ mode, all of which are configurable from the control panel. The output is four RJ-45 type connections. The DMX input and output are on the rear panel and also use a RJ-45 type connection.

Features

- 1, 2, 3, 4, 5, 6, 9, 12, or 15-channel DMX control
- Operating modes:

RGB

1-channel: RGB, dimmer (no individual RGB adjustments)

3-channel: RGB control (individual RGB adjustments)

4-channel: RGB control, dimmer

6-channel: RGB control, dimmer, color macro, strobe

9-channel: RGB control, dimmer, color macro, strobe, auto + custom, auto speed, zone selection

12-channel: RGB control, line control

15-channel: RGB control, line control, dimmer, color macro, strobe

SpectraWhite™

1-channel: White dimmer

2-channel: White control (warm + cool)

2-channel: White macro, dimmer

3-channel: White control (warm + cool), dimmer


5-channel: White control (warm + cool), macro, dimmer

- RGB color mixing with or without DMX control (RGB mode)
- White effects mixing with or without DMX control (SpectraWhite™ mode)
- Automated and customizable programs (RGB mode)
- Recall auto and custom programs via master/slave or DMX

Additional Features

- Master/Slave (RJ-45)
- Static Playing
- RGB and white color calibration
- Schedule playback with time clock functions
- LCD display with password protection

Product Overview

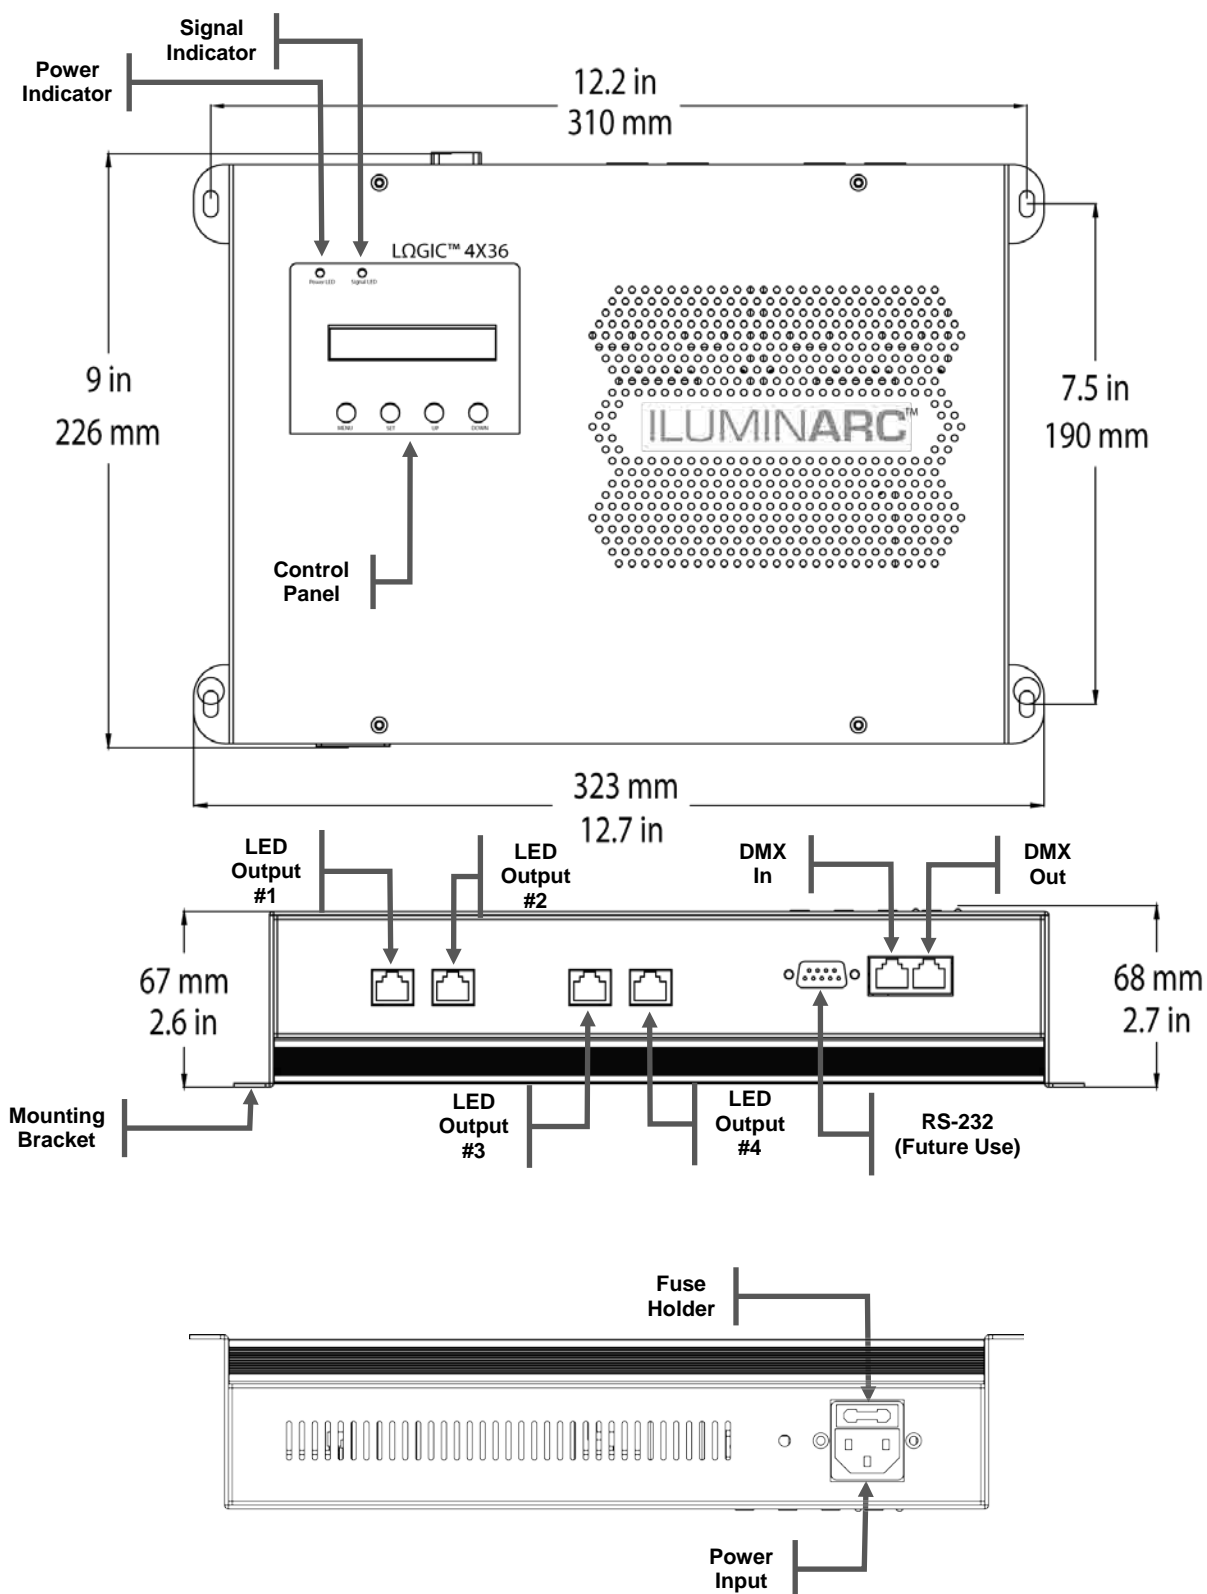

3. Installation



Always connect the LQGIC™ 4X36 to a protected circuit with an appropriate electrical ground to avoid the risk of electrocution or fire.



Never connect the LQGIC™ 4X36 to a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel serves only as a 0 to 100% switch.



Make sure to disconnect the products power cord before replacing a blown fuse, and always replace it with a fuse of the same type and rating.

AC Power

The LQGIC™ 4X36 has an auto-ranging power supply that can work with an input voltage range of 100~240 VAC, 50/60 Hz.

Make sure that you are connecting this product to the proper voltage, as per the specifications in this guide, the product's user manual, or on the product's sticker.

Power Consumption

To determine the power requirements for the LQGIC™ 4X36 see the label affixed to the side of the product. Alternatively, you may refer to the corresponding specifications chart in the *Technical Information* chapter of this manual.

The listed current rating indicates the maximum current draw during normal operation.


AC Plug

The LQGIC™ 4X36 comes with a power input cord terminated with an IEC connector on one end and an Edison plug on the other end (US market). If the power cord that came with your product has no plug or you need to change the Edison plug, use the table below to wire the new plug.

| Connection | Wire (US) | Screw Color (US) | Wire (Europe) |
|------------|--------------|------------------|---------------|
| AC Live | Black | Yellow or Brass | Brown |
| AC Neutral | White | Silver or Gray | Blue |
| AC Ground | Green/Yellow | Green | Green/Yellow |

Fuse Replacement

1. With a flat head screwdriver, wedge the fuse holder out of its housing and remove the blown fuse from its holder.
2. Replace the blown fuse with a fuse of the exact same type and rating.
3. Insert the fuse holder back in its place, and reconnect power.

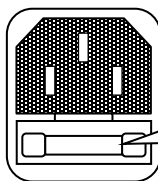

The fuse is located inside this compartment. Remove it using a flat head screwdriver.



The products must be linked using DMX cable in a daisy chain (serial) fashion. To comply with the EIA-485 standard, no more than 32 products should be connected on one daisy chain without using a DMX optically-isolated splitter. Doing otherwise may result in deterioration of the digital DMX signal.



USITT recommends limiting the total length of the DMX cable (from the first product/controller to the last product) to 300 ~ 455 m (985 ~ 1,500 ft).



The Operation chapter of this manual provides detailed instructions on how to configure the Master and Slave products.

DMX Linking

The LQIGIC™ 4X36 uses a CAT5 cable to link to other units.

- The first unit of each set of LQIGIC™ 4X36 units must connect to the DMX controller with a CAT5 to XLR male adapter.
- The last LQIGIC™ 4X36 unit must use a CAT5 to XLR female adapter to continue the serial link to other DMX compatible units.

You may link the LQIGIC™ 4X36 to a DMX controller using a CAT5 cable. If using other DMX compatible products with the LQIGIC™ 4X36, it is possible to control them individually with a single DMX controller.

If you are not familiar with the DMX standard, or if you need information about the DMX cables needed to link the LQIGIC™ 4X36 to a DMX controller, you may download the “DMX Primer” document from the ILUMINARC® web site: www.iluminarc.com.

DMX Modes

The LQIGIC™ 4X36 uses the CAT5 DMX data connection for its two DMX modes (SpectraWhite™ and RGB). These modes contain their own separate personalities.

Refer to the *Introduction* chapter for a brief description of these modes and the *Operation* chapter to learn how to configure the LQIGIC™ 4X36 to work in these modes. The DMX Values section will give you detailed information regarding the above-mentioned DMX modes.

Master/Slave Linking

The LQIGIC™ 4X36 supports master/slave mode. Several DMX compatible units can be synchronized without a DMX controller in master/slave operating mode.

The Master/Slave mode allows a LQIGIC™ 4X36 unit (the master) running a preconfigured program to control several other LQIGIC™ 4X36 units (the slaves) without requiring a DMX controller. In this mode, all the slave units will operate in unison with the master unit.

When in Master/Slave mode, the LQIGIC™ 4X36 units link to each other using the standard CAT5 connection.

LQIGIC™ 4X36 Product Linking

The following steps provide the easiest method for connecting a set of one or more LQIGIC™ 4X36 units to the same DMX cable.


1. Connect the RJ-45 plug of the DMX to RJ-45 adapter to the “DMX In” RJ-45 jack on the first LQIGIC™ 4X36 product.
2. Connect the XLR male connector of the DMX to RJ-45 adapter directly to the “DMX Out” (female) connector on the DMX controller or to the DMX cable coming from the DMX controller.
3. Connect one of the RJ-45 plugs of the signal patch cable to the “DMX Out” RJ-45 jack on the first LQIGIC™ 4X36 product.
4. Connect the other RJ-45 plug of the signal patch cable to the “DMX In” RJ-45 jack on the second LQIGIC™ 4X36 product.
5. Continue linking the LQIGIC™ 4X36 products using more signal patch cables, as shown in the diagram below.



Do not use the splitter as a coupler.



All cables must be terminated to a fixture.

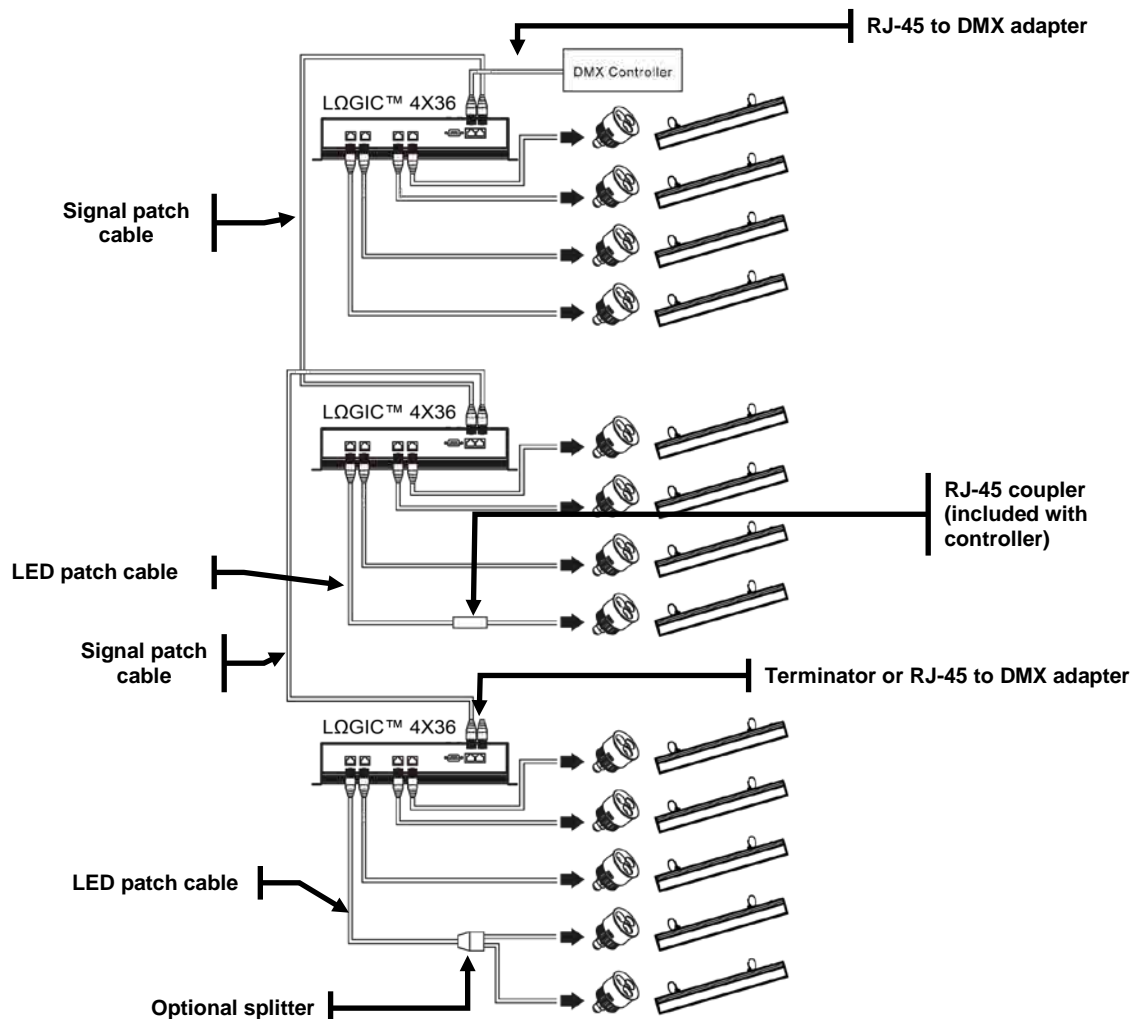

Maximum Output Line Loading

The LQGIC™ 4X36 product has four output lines. This means that the user can combine various output lines to create zones. Each output line has three channels whose names change depending on the selected operation mode.

- RGB mode: Red, Green, and Blue
- SpectraWhite™ mode: Warm, Natural, and Cool

Each channel can support up to twelve (12) LEDs. As a result, the maximum number of LEDs supported by an output line is 36.

Inside the LQGIC™ products, the LEDs are grouped in clusters of three LEDs each. In an LED cluster, each LED connects to an individual output channel from the LQGIC™ product. When a product has more than one cluster, the same output channel supports as many LEDs as clusters the product has.

Please see the guide below for the output line loading. This table shows the maximum number of a single type of products that can be loaded onto each of the LQGIC™ 4X36's output lines.



When connecting LQGIC™ products to the LQGIC™ 4X36 controller, do not exceed the maximum of 12 LEDs per output channel (36 LEDs total for the output line).

| MODEL NAME | TOTAL LED'S | MAX. NUMBER OF CONNECTED PRODUCTS PER OUTPUT |
|--------------------------------|-------------|--|
| Illumiline LQGIC™ 36 RGB | 36 | 1 |
| Illumiline LQGIC™ 24 RGB | 24 | 1 |
| Illumiline LQGIC™ 24 Optic RGB | 24 | 1 |
| Illumiline LQGIC™ 12 Optic | 12 | 3 |
| Illumiline LQGIC™ 12 | 12 | 3 |
| Illumipod LQGIC™ 12 Optic | 12 | 3 |
| Illumipod LQGIC™ Tri-4 | 12 | 3 |
| Illumipod LQGIC™ 6 Optic | 6 | 6 |
| Illumipod LQGIC™ 3 Optic | 3 | 12 |
| Illumipod LQGIC™ Tri-1 | 3 | 12 |

You may also combine different products together, as long as you do not exceed the maximum of 36 LEDs per output line. Please see the following example of a possible combination.


| | | |
|--------------------------|-------------|------------|
| Illumipod LQGIC™ Tri-4 | 12 X 2 = 24 | 2 products |
| Illumipod LQGIC™ 6 Optic | 6 x 2 = 12 | 2 products |
| Total | 36 LEDs | 4 products |

Cable Connections




RJ-45 Plug

 
DMX XLR (male)



RJ-45 Plug Pin Assignment
View facing pins

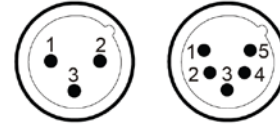


XLR
(male)
3-pin

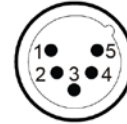

XLR
(male)
5-pin


| RJ-45 Plug | 3-pin XLR Male | 5-pin XLR Male |
|----------------------|----------------------|----------------------|
| Pin 1: Not Used | | |
| Pin 2: Not Used | | |
| Pin 3: Not Used | | |
| Pin 4: Not Used | | Pin 4: Not Used |
| Pin 5: +5 V | | Pin 5: Not Used |
| Pin 6: Data + | Pin 3: Data + | Pin 3: Data + |
| Pin 7: Data - | Pin 2: Data - | Pin 2: Data - |
| Pin 8: GND | Pin 1: GND | Pin 1: GND |

 Signal Patch cable: Used for linking two LQGITM 4X36products



| RJ-45 Plug | RJ-45 Plug |
|----------------------|----------------------|
| Pin 1: Not Used | Pin 1: Not Used |
| Pin 2: Not Used | Pin 2: Not Used |
| Pin 3: Not Used | Pin 3: Not Used |
| Pin 4: Not Used | Pin 4: Not Used |
| Pin 5: +5 V | Pin 5: +5 V |
| Pin 6: Data + | Pin 6: Data + |
| Pin 7: Data - | Pin 7: Data - |
| Pin 8: GND | Pin 8: GND |

 LED Patch Cable: Used to link the LQGITM 4X36 to its products.



| Pin # | Wire Color | Function |
|-------|--------------|-------------|
| 1 | White/Orange | Red LED + |
| 2 | Orange/White | Green LED + |
| 3 | White/Green | Blue LED + |
| 4 | Blue/White | Not Used |
| 5 | White/Blue | Red LED - |
| 6 | Green/White | Green LED - |
| 7 | White/Brown | Blue LED - |
| 8 | Brown/White | Not Used |

Mounting

Before mounting this product, read and follow the safety recommendations indicated in the Safety Notes section (page 2 of this manual).

Orientation

Always mount this product in any safe position while making sure that there is adequate room around it for ventilation, configuration, and maintenance.

Installation

The LQGIC™ 4X36 consists of a single product with 4 mounting points. ILUMINARC® recommends following the general guidelines below when mounting the LQGIC™ 4X36.

- When selecting an installation location, consider ease of access to the product for operation, programming adjustments, and routine maintenance.
- Never mount the product in places where rain, high humidity, extreme temperature changes, or restricted ventilation may affect it.
- Make sure that the location where you are mounting the product can support its weight. Please see the Technical Specifications section of this manual for the weight requirement of this product.

Procedure


The LQGIC™ 4X36 has four (4) 5mm screw holes built into the casing which serves as mounting points. Use four (4) screws to attach the product to a flat, dry surface. Make sure that you can access the product for maintenance and programming.



Make sure to mount this product away from any flammable material as indicated in the Safety Notes.



Please consult local electrical code compliance and regulations for any additional installation restrictions.

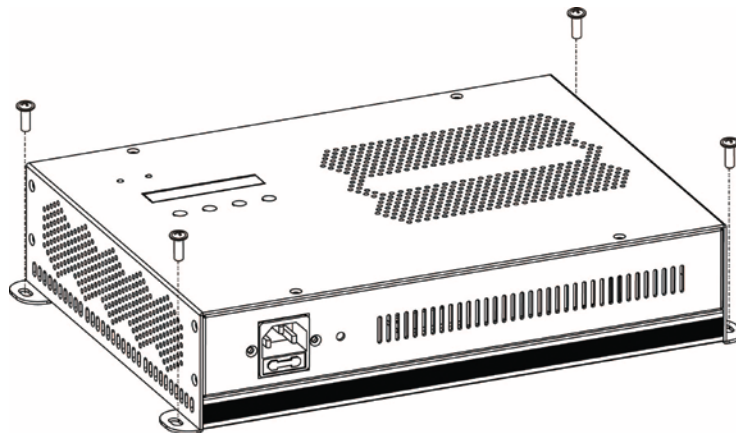

4. Operation

Control Panel Description

| Button | Function |
|--------|--|
| <MENU> | Exits from the current menu or function |
| <SET> | Enables the currently displayed menu or sets the currently selected value in to the current function |
| <UP> | Navigates upwards through the menu list and increases the numeric value when in a function |
| <DOWN> | Navigates downwards through the menu list and decreases the numeric value when in a function |

Control Options

You can set the LOGIC™ 4X36 start address in the 001~512 DMX range. This allows for the control of up to 34 products in the 15-channel **RGB+LINE+DMS** personality.

Programming (RGB Mode)

Refer to the *Menu Options* section to learn how the menu options relate to each other. The *Menu Options* section has a *Main* level and a variable number of programming levels for each option.



When running the product using a DMX controller, make sure that the **Menu>Run** is set to **DMX**.

- To go to an option in the *Main* level, press <MENU> repeatedly until the option shows on the display. Press <SET> to select. This will take you to the first programming level for that option.
- To select an option or value within the current programming level, press <UP> or <DOWN> until the option or value is displayed. Press <SET> to accept. If there is another programming level, you will see that level's first option. If not, you will see the selected value.
- To exit to the previous menu level, press <MENU>.

Mode Selection

1. Go to **MENU>SETTINGS**.
2. Select **GOTO RGB**.
3. Select **YES?**

DMX Addressing

1. Go to **MENU>DMX ADDRESS**.
2. Select the starting address [**001~512**].
3. Go to **MENU >OPERATION**.
4. Select **DMX**.

DMX Personality

1. Go to **MENU>PERSONALITY** and select any DMX personality.
2. Make sure to rearrange the DMX addresses of all products in the current DMX universe to avoid address overlapping.

Master/Slave

On the Master product:

1. Go to **MENU>OPERATION** and select **DMX**.
2. Go to **MENU>PLAY AUTO** and select any Auto program.

On each of the Slave products:

1. Go to **MENU>OPERATION** and select **SLAVE**.

The slave products will follow the program played by the Master.

Static Colors

1. Go to **MENU>PLAY STATIC**.
2. Select an output line **L** [1~4]
3. Select a color or effect **RED, GREEN, BLUE, DIMMER**, and **STROBE**.
4. Select a color value [000~255] or a strobe frequency [0~20].

Auto Play

1. Go to **MENU>PLAY AUTO**.
2. Select a program **RGB**, or **RGBL** [01~10].
3. Select a speed **SP** [001~255].

Custom Play

1. Go to **MENU>CUSTOM**.
2. Select a program **CUSTOM** [01~10].

Edit Custom

1. Go to **MENU>EDIT**.
2. Select a program **C**-[01~10].
3. Select a scene **S**-[01~20].
4. Select a color **R, G**, or **B**.
5. Configure the color value [000~255].
6. Repeat steps 4 and 5 for the other colors.
7. Configure the strobe frequency **S** [00~20].
8. Configure the **Step** and **Fade** timers [000~255].
9. Repeat steps 4 to 8 for the other scenes.

RGB to White Setting

When **RGB TO W** is active, the product will automatically use the RGB values for a balanced white look. When inactive, the product will use the most powerful intensity.

1. Go to **MENU>SETTTINGS>RGB TO WHITE**.
2. Select **YES** or **NO**.



AUTO 01~10 are fully configured programs and cannot be modified. However, **CUSTOM 01~10** programs are fully customizable (see Edit Custom).



AUTO 01~10 consist of two (2) different, fully configured programs giving the user a total of twenty(20) different auto programs to choose from.

Whites Setting

1. Go to **MENU>SETTINGS>CALIBRATION**.
2. Select a white color **WHITE 1~9** or **RGB TO WHITE**.
3. Set a color **R**, **G**, or **B**.
4. Configure the color value [**000~255**].
5. Repeat steps 2 thru 4 for the other RGB colors to obtain a white color.

Set Time and Date

1. Go to **MENU>SETTINGS>CLOCK>EDIT TIME**.
2. Set Year, Day Of Week, Day, Month, Hour, Min, and Sec.

Set Schedule

1. Go to **MENU>SCHEDULE**. A day of the week or "**EVERYDAY**" will show on the LCD.
2. Select **DOW** or **EVERYDAY**.
3. Select **NO**. [**01~10**].
4. Set **CUSTOM** [**01~10**], **STATIC**, **RGBL** [**01~10**], **RGB** [**01~10**], or **PLAY NONE**.
5. Set Start time [**00:00** to **23:59**].
Set End time [**00:00** to **23:59**].

Playing Schedule

1. Go to **MENU>PLAY SCHEDULE**.



The Password is fixed by default. It is not able to be changed.

Password

When **KEYLOCK** is active, the product will ask you to enter the password (<**UP**>, <**DOWN**>, <**UP**>, and <**DOWN**>) after 30 seconds of control panel inactivity or upon power up.

1. Go to **MENU >SETTINGS**.
2. Select **ON/OFF**.



If the upload is successful, all the products will show "Success" on the LCD.

Upload Customs

1. Set all products that are going to receive the upload to **SLAVE** operation.
2. Disconnect the products from the DMX controller.
3. On the product whose custom programs you are going to copy, got to **MENU >SETTINGS** and select **UPLOAD**.
4. Enter the password and press <**SET**>for the upload to start.

Reset

1. Go to **MENU>SETTINGS**.
2. Select **RESET CUSTOM** (resets custom programs), **RESET SCHEDULE** (resets schedule), or **RESET ALL** (resets entire product to factory default).
3. When **YES** shows, press <**SET**>.

Programming (SpectraWhite™ Mode)

Refer to the Menu Options section on page 20 to learn how the menu options relate to each other. The Menu Options section has a Main level and a variable number of programming levels for each option.

- To go to an option in the Main level, press <MENU> repeatedly until the option shows on the display. Press <SET> to select it. This will take you to the first programming level for that option.
- To select an option or value within the current programming level press <UP> or <DOWN> until it shows on the display. Press <SET> to accept it. In this case, if there is another programming level, you will see its first option. Otherwise, you will see the selected value.
- To exit to the previous menu level, press <MENU>.

Mode Selection

1. Go to **MENU>SETTINGS**.
2. Select **GOTOWHITE**.
3. Select **YES?**

DMX Addressing

1. Go to **MENU >DMX ADDRESS**.
2. Select the starting address [**001~512**].
3. Go to **MENU >OPERATION**.
4. Select **DMX**.

DMX Personality

1. Go to **MENU>PERSONALITY** and select any DMX personality.
2. Make sure to rearrange the DMX addresses of all products in the current DMX universe to avoid address overlapping.

Master/Slave

On the Master product:

1. Go to **MENU>OPERATION** and select **DMX**.
2. Go to **MENU>MOOD**.
3. Select **COOL**, **WARM**, or **NATURAL**.
4. Select **DIM[000~255]**

On each of the Slave products:

1. Go to **MENU>OPERATION** and select **SLAVE**.

The slave products will follow the program played by the Master.

Static Colors

1. Go to **MENU>PLAYSTATIC**.
2. Select an output line **L [1~4]**.
3. Select a color or effect **COOL**, **WARM**, **DIMMER**, and **STROBE**.
4. Select a color value [**000~255**] or a strobe frequency [**00~20**]

Auto Play

1. Go to **MENU>MOOD**.
2. Select a program **COOL**, **WARM**, or **NATURAL**.
3. Select **DIM [000~255]**.

Whites Setting

1. Go to **MENU>SETTINGS>CALIBRATION**.
2. Select a white macro **WHITE [1~5]**.
3. Configure the color value for **WARM** and **COOL [000~255]**.
4. Repeat steps 2 and 3 for the other white macros.

Set Time and Date

1. Go to **MENU>SETTINGS>EDIT TIME**.
2. Set Year, Day Of Week, Day, Month, Hour, Min, and Sec.

Set Schedule

1. Go to **MENU>SCHEDULE**. A day of the week or “**EVERYDAY**” will show on the LCD.
2. Select **DOW** or **EVERYDAY**.
3. Select **NO [01~10]**.
4. Set **WHITE [1~5]** or **PLAY NONE**.
5. Set Start time [**00:00** to **23:59**].
Set End time [**00:00** to **23:59**].

Playing Schedule

1. Go to **MENU>PLAY SCHEDULE**.

Password

When KEYLOCK is active, the product will ask you to enter the password (<**UP**>, <**DOWN**>, <**UP**>, and <**DOWN**>) after 30 seconds of control panel inactivity or upon power up.

1. Go to **MENU >SETTINGS**.
2. Select **ON/OFF**.

Reset

1. Go to **MENU>SETTINGS**.
2. Select **RESET ALL** (sets product back to factory default settings).
3. When **YES** shows, press <**SET**>.

Menu Options RGB Mode

| Main | Programming Steps | | | | Instructions | |
|------------------|--------------------|-------------------|-------------|------------------|--|-------------------------------|
| 1. Play auto | RGB 1~10 | RGBL 1~10 | SPEED | 1~255 | Choose from 10 automatic programs | |
| 2. Play custom | CUSTOM 1~10 | | | | Choose from 10 user-defined programs | |
| 3. Play Static | L1~4 | RED | | 0~255 | Configure and/or play a single step program | |
| | | GREEN | | | | |
| | | BLUE | | | | |
| | | DIMMER | | | | |
| | | STROBE | | 0~20 | | |
| 4. Play schedule | SCHEDULE PLAYING! | | | | Play scheduled program | |
| 5. DMX address | 001~512 | | | | Sets DMX starting address | |
| 6. Personality | EFFECT | | | | 9-channel mode | |
| | RGB | | | | 3-channel mode | |
| | RGB+D | | | | 4-channel mode | |
| | RGB+DMS | | | | 6-channel mode | |
| | RGB+LINE | | | | 12-channel RGB control over individual lines | |
| | RGB+LINE+DMS | | | | 15-channel RGB control over individual lines + dimmer, color macro + strobe | |
| | SOLID | | | | 1-channel mode | |
| 7. Edit custom | C-1~10 (custom) | S-1~20 (scene) | R G B | 0~255 | Combine Red, Green, and Blue to generate a custom color | |
| | | | S | 0~20 | Set the strobe frequency | |
| | | | T | 0~255 | Set the on time | |
| | | | F | | Set the fading time | |
| 8. Settings | PASSWORD | | ON/OFF | | Turn password protection on after 30 seconds of being idle | |
| | ALLOW EDIT | | YES/NO | | Reserved for future use | |
| | RESET ALL | | | | Default all settings | |
| | RESET CUSTOM | | | | Erase the custom programs | |
| | RESET SCHEDULE | | | | Erase the schedule | |
| | UPLOAD | | PASSWORD? | [Enter Password] | Transfer custom programs from master to slave products | |
| | CLOCK | TIME NOW | | | | View the DOW, date, and time |
| | | EDIT TIME | YEAR | | 00~99 | Edit the DOW, date, and time |
| | | | DOW | | SU~SA | |
| | | | DAY | | 01~31 | |
| | | | MONTH | | 00~12 | |
| | | | HOUR | | 00~23 | |
| | | | MIN | | 00~59 | |
| | | | SEC | | | |
| | CALIB- RATION | WHITE 1~9 | | R G B | 0~255 | Modify the White macros |
| | | RGB TO WHITE | | | | Configure RGB to WHITE values |
| | RGB TO WHITE | | YES/NO | | [Yes]RGB TO WHITE defines output color when RGB faders are at “255” [No]Max. intensity when RGB faders are at “255” | |
| | GO TO WHITE | | YES? | | Go to SpectraWhite™ mode | |

Continues on the next page

Continued from previous page

| Main | Programming Steps | | | | Instructions |
|--------------|---|---------------------|-----------------------|----------------|--|
| 9. Operation | DMX | | | | Work with a DMX controller |
| | SLAVE | | | | Slave mode |
| | EASY PLAY | | | | Optional remote |
| 10. Schedule | SUNDAY~SATURDAY (Different schedules for each DOW) | No.1~10 | RGB RGBL CUSTOM | 1~10 | After selecting DOW, schedule #, and program, enter starting and ending time [00:00~23:59] |
| | EVERYDAY (Same schedule for every DOW) | | STATIC | | |
| | | | PLAY NONE | | |
| 11. Patch | PATCH 1~6 | RGB RGBL CSTM | 1~10 | For future use | |

Menu Options SpectraWhite™ Mode

| Main | Programming Steps | | | | Instructions |
|------------------|---|-----------|-----------|---|--|
| 1. Mood | WARM | | DIM | 1~255 | Choose a white effect and intensity |
| | NATURAL | | | | |
| | COOL | | | | |
| 2. Play Static | L1~4 | COOL | 0~255 | Configures and/or plays a single step program per output line | |
| | | WARM | | | |
| | | DIMMER | | | |
| | | STROBE | 0~20 | | |
| 3. Play schedule | SCHEDULE PLAYING! | | | | Playscheduled program |
| 4. DMX Address | 001~512 | | | | Sets DMX starting address |
| 5. Personality | STUDIO W | | | | 2-channel mode |
| | STUDIO W+D | | | | 3-channel mode |
| | STUDIO 1 | | | | 2-channel mode |
| | STUDIO 2 | | | | 4-channel mode |
| | SOLID | | | | 1-channel mode |
| 6. Settings | PASSWORD | | ON/OFF | | Turns password protection on after 30 seconds of being idle |
| | RESET ALL | | YES/NO | | Defaults all settings |
| | CALIB- RATION | WHITE 1~5 | WARM | 0~255 | Modify the White macros |
| | | | COOL | | |
| | TIME NOW | | | | View the DOW, date, and time |
| | EDIT TIM | YEAR | 2000~2099 | | Edit the DOW, date, and time |
| | | DOW | SA~SU | | |
| | | DAY | 01~31 | | |
| | | MONTH | 01~12 | | |
| | | HOUR | 00~23 | | |
| | | MIN | 00~59 | | |
| | | SEC | | | |
| | GO TO RGB | | YES? | | Go to RGB mode |
| 7. Operation | DMX | | | | Work with a DMX controller |
| | SLAVE | | | | Slave mode with Master product |
| 8. Schedule | SUNDAY-SATURDAY (Different schedules for each DOW) | | No. 1~10 | WHITE 1~5 | After selecting DOW, schedule #, and white macro; enter starting and ending time [00:00~23:59] |
| | EVERYDAY (Same schedule every DOW) | | | | |

DMX Values RGB Mode

EFFECT

| Channel | Function | Value | Percent/Setting |
|---------|-----------------------------|-----------|---------------------------------------|
| 1 | Red | 000 ◊ 255 | 0~100% |
| | Step Time | | When CUS. 01-10 in CH. 7 is activated |
| 2 | Green | 000 ◊ 255 | 0~100% |
| | Step Time | | When CUS. 01-10 in CH. 7 is activated |
| 3 | Blue | 000 ◊ 255 | 0~100% |
| 4 | Dimmer | 000 ◊ 255 | 0~100% |
| 5 | Color Macro + White Balance | 000 ◊ 010 | No Function |
| | | 011 ◊ 035 | R: 100% G: Up B: 0% |
| | | 036 ◊ 060 | R: Down G: 100% B: 0% |
| | | 061 ◊ 085 | R: 0% G: 100% B: Up |
| | | 086 ◊ 110 | R: 0% G: Down B: 100% |
| | | 111 ◊ 135 | R: Up G: 0% B: 100% |
| | | 136 ◊ 160 | R: 100% G: 0% B: Down |
| | | 161 ◊ 185 | R: 100% G: Up B: Up |
| | | 186 ◊ 210 | R: Down G: Down B: 100% |
| | | 211 ◊ 215 | White 1: 3,200 K |
| | | 216 ◊ 220 | White 2: 3,400 K |
| | | 221 ◊ 225 | White 3: 4,200 K |
| | | 226 ◊ 230 | White 4: 4,900 K |
| | | 231 ◊ 235 | White 5: 5,600 K |
| | | 236 ◊ 240 | White 6: 5,900 K |
| | | 241 ◊ 245 | White 7: 6,500 K |
| | | 246 ◊ 250 | White 8: 7,200 K |
| | | 251 ◊ 255 | White 9: 8,500 K |
| 6 | Strobe | 000 ◊ 004 | No Function |
| | | 005 ◊ 255 | 0~20 Hz |
| 7 | Auto + Custom Programs | 000 ◊ 020 | No function |
| | | 021 ◊ 030 | Auto RGB 1 |
| | | 031 ◊ 040 | Auto RGB 2 |
| | | 041 ◊ 050 | Auto RGB 3 |
| | | 051 ◊ 060 | Auto RGB 4 |
| | | 061 ◊ 070 | Auto RGB 5 |
| | | 071 ◊ 080 | Auto RGBL 1 |
| | | 081 ◊ 090 | Auto RGBL 2 |
| | | 091 ◊ 100 | Auto RGBL 3 |
| | | 101 ◊ 110 | Auto RGBL 4 |
| | | 111 ◊ 120 | Auto RGBL 5 |
| | | 121 ◊ 130 | Custom 1 |
| | | 131 ◊ 140 | Custom 2 |
| | | 141 ◊ 150 | Custom 3 |
| | | 151 ◊ 160 | Custom 4 |
| | | 161 ◊ 170 | Custom 5 |
| | | 171 ◊ 180 | Custom 6 |
| | | 181 ◊ 190 | Custom 7 |
| | | 191 ◊ 200 | Custom 8 |
| | | 201 ◊ 210 | Custom 9 |
| | | 211 ◊ 220 | Custom 10 |
| | | 221 ◊ 255 | No function |
| 8 | Auto Programs Speed | 000 ◊ 255 | Slow~fast |
| 9 | Zone Selection | 000 ◊ 009 | All Lines |
| | | 010 ◊ 029 | Line 1 |
| | | 030 ◊ 049 | Line 2 |
| | | 050 ◊ 069 | Line 3 |
| | | 070 ◊ 089 | Line 4 |
| | | 090 ◊ 109 | Line 1,2 |
| | | 110 ◊ 129 | Line 2,3 |
| | | 130 ◊ 149 | Line 3,4 |
| | | 150 ◊ 169 | Line 1,4 |
| | | 170 ◊ 189 | Line 1,3 |
| | | 190 ◊ 209 | Line 2,4 |
| | | 210 ◊ 219 | Line 1,2,3 |
| | | 220 ◊ 229 | Line 2,3,4 |
| | | 230 ◊ 239 | Line 1,2,4 |
| | | 240 ◊ 249 | Line 1,3,4 |
| | | 250 ◊ 255 | All Lines |

DMX Values RGB Mode (Cont.)

RGB

| Channel | Function | Value | Percent/Setting |
|---------|----------|-----------|-----------------|
| 1 | Red | 000 ◊ 255 | 0~100% |
| 2 | Green | 000 ◊ 255 | 0~100% |
| 3 | Blue | 000 ◊ 255 | 0~100% |

RGB + D

| Channel | Function | Value | Percent/Setting |
|---------|----------|-----------|-----------------|
| 1 | Red | 000 ◊ 255 | 0~100% |
| 2 | Green | 000 ◊ 255 | 0~100% |
| 3 | Blue | 000 ◊ 255 | 0~100% |
| 4 | Dimmer | 000 ◊ 255 | 0~100% |

RGB + DMS

| Channel | Function | Value | Percent/Setting |
|---------|-----------------------------|---|-----------------|
| 1 | Red | 000 ◊ 255 | 0~100% |
| 2 | Green | 000 ◊ 255 | 0~100% |
| 3 | Blue | 000 ◊ 255 | 0~100% |
| 4 | Dimmer | 000 ◊ 255 | 0~100% |
| 5 | Color Macro + White Balance | 000 ◊ 010 No Function 011 ◊ 035 R: 100% G: Up B: 0% 036 ◊ 060 R: Down G: 100% B: 0% 061 ◊ 085 R: 0% G: 100% B: Up 086 ◊ 110 R: 0% G: Down B: 100% 111 ◊ 135 R: Up G: 0% B: 100% 136 ◊ 160 R: 100% G: 0% B: Down 161 ◊ 185 R: 100% G: Up B: Up 186 ◊ 210 R: Down G: Down B: 100% 211 ◊ 215 White 1: 3,200 K 216 ◊ 220 White 2: 3,400 K 221 ◊ 225 White 3: 4,200 K 226 ◊ 230 White 4: 4,900 K 231 ◊ 235 White 5: 5,600 K 236 ◊ 240 White 6: 5,900 K 241 ◊ 245 White 7: 6,500 K 246 ◊ 250 White 8: 7,200 K 251 ◊ 255 White 9: 8,500 K | |
| 6 | Strobe | 000 ◊ 255 | 0~20 Hz |

RGB + LINE

| Channel | Function | Value | Percent/Setting |
|---------|-----------|-----------|-----------------|
| 1 | Red - 1 | 000 ◊ 255 | 0~100% |
| 2 | Green - 1 | 000 ◊ 255 | 0~100% |
| 3 | Blue - 1 | 000 ◊ 255 | 0~100% |
| 4 | Red - 2 | 000 ◊ 255 | 0~100% |
| 5 | Green - 2 | 000 ◊ 255 | 0~100% |
| 6 | Blue - 2 | 000 ◊ 255 | 0~100% |
| 7 | Red - 3 | 000 ◊ 255 | 0~100% |
| 8 | Green - 3 | 000 ◊ 255 | 0~100% |
| 9 | Blue - 3 | 000 ◊ 255 | 0~100% |
| 10 | Red - 4 | 000 ◊ 255 | 0~100% |
| 11 | Green - 4 | 000 ◊ 255 | 0~100% |
| 12 | Blue - 4 | 000 ◊ 255 | 0~100% |

RGB + LINE + DMS

| Channel | Function | Value | Percent/Setting |
|---------|-----------------------------|-----------|-------------------------|
| 1 | Red - 1 | 000 ◊ 255 | 0~100% |
| 2 | Green - 1 | 000 ◊ 255 | 0~100% |
| 3 | Blue - 1 | 000 ◊ 255 | 0~100% |
| 4 | Red - 2 | 000 ◊ 255 | 0~100% |
| 5 | Green - 2 | 000 ◊ 255 | 0~100% |
| 6 | Blue - 2 | 000 ◊ 255 | 0~100% |
| 7 | Red - 3 | 000 ◊ 255 | 0~100% |
| 8 | Green - 3 | 000 ◊ 255 | 0~100% |
| 9 | Blue - 3 | 000 ◊ 255 | 0~100% |
| 10 | Red - 4 | 000 ◊ 255 | 0~100% |
| 11 | Green - 4 | 000 ◊ 255 | 0~100% |
| 12 | Blue - 4 | 000 ◊ 255 | 0~100% |
| 13 | Dimmer | 000 ◊ 255 | 0~100% |
| 14 | Color Macro + White Balance | 000 ◊ 010 | No Function |
| | | 011 ◊ 035 | R: 100% G: Up B: 0% |
| | | 036 ◊ 060 | R: Down G: 100% B: 0% |
| | | 061 ◊ 085 | R: 0% G: 100% B: Up |
| | | 086 ◊ 110 | R: 0% G: Down B: 100% |
| | | 111 ◊ 135 | R: Up G: 0% B: 100% |
| | | 136 ◊ 160 | R: 100% G: 0% B: Down |
| | | 161 ◊ 185 | R: 100% G: Up B: Up |
| | | 186 ◊ 210 | R: Down G: Down B: 100% |
| | | 211 ◊ 215 | White 1: 3,200 K |
| | | 216 ◊ 220 | White 2: 3,400 K |
| | | 221 ◊ 225 | White 3: 4,200 K |
| | | 226 ◊ 230 | White 4: 4,900 K |
| | | 231 ◊ 235 | White 5: 5,600 K |
| | | 236 ◊ 240 | White 6: 5,900 K |
| | | 241 ◊ 245 | White 7: 6,500 K |
| | | 246 ◊ 250 | White 8: 7,200 K |
| | | 251 ◊ 255 | White 9: 8,500 K |
| 15 | Strobe | 000 ◊ 255 | 0~20 Hz |

SOLID

| Channel | Function | Value | Percent/Setting |
|---------|---------------|-----------|-----------------|
| 1 | Master Dimmer | 000 ◊ 255 | 0~100% |

DMX Values SpectraWhite™ Mode

STUDIO W

| Channel | Function | Value | Percent/Setting |
|---------|------------|-----------|-----------------|
| 1 | Warm White | 000 ○ 255 | 0~100% |
| 2 | Cool White | 000 ○ 255 | 0~100% |

STUDIO W+D

| Channel | Function | Value | Percent/Setting |
|---------|------------|-----------|-----------------|
| 1 | Dimmer | 000 ○ 255 | 0~100% |
| 2 | Warm White | 000 ○ 255 | 0~100% |
| 3 | Cool White | 000 ○ 255 | 0~100% |

STUDIO 1

| Channel | Function | Value | Percent/Setting |
|---------|-------------|---|---|
| 1 | Dimmer | 000 ○ 255 | 0~100% |
| 2 | White Macro | 000 ○ 050 051 ○ 080 081 ○ 110 111 ○ 140 141 ○ 255 | White 1: 3200 K White 2: 3400 K White 3: 4500 K White 4: 4900 K White 5: 5600 K |

STUDIO 2

| Channel | Function | Value | Percent/Setting |
|---------|---------------|---|---|
| 1 | Master Dimmer | 000 ○ 255 | 0~100% |
| 2 | Warm White | 000 ○ 255 | 0~100% |
| 3 | Cool White | 000 ○ 255 | 0~100% |
| 4 | White Macro | 000 ○ 050 051 ○ 080 081 ○ 110 111 ○ 140 141 ○ 255 | White 1: 3200 K White 2: 3400 K White 3: 4500 K White 4: 4900 K White 5: 5600 K |
| 5 | Strobe | 000 ○ 255 | 0~20 Hz |

SOLID

| Channel | Function | Value | Percent/Setting |
|---------|----------|-----------|-----------------|
| 1 | Dimmer | 000 ○ 255 | 0~100% |

5. Technical Information

System Maintenance

To maintain optimum performance and minimize wear, the user should clean the product frequently. Usage and environment are contributing factors in determining the cleaning frequency. As a rule, the user should clean the product at least twice a month. Dust build up reduces light output performance and can cause overheating. This can lead to reduced light source life and increased mechanical wear.

The cleaning frequency depends on the environment in which the product operates. Damp, smoky, or particularly dirty surrounding can cause greater accumulation of dirt on the product's optics.

To clean a product, follow the recommendations below:

1. Unplug the product from power.
2. Wait until the product is cold.
3. Use a vacuum (or dry compressed air) and a soft brush to remove dust collected on the external vents and reachable internal components.
4. Apply the solution directly to the cloth or tissue and drag any dirt and grime to the outside of the product.



If the product has fans, make sure that you never spin a fan if cleaning the product with compressed air.

Product Repairs

ILUMINARC® strongly advises you against attempting any repairs to this product unless you are an authorized ILUMINARC® technician.

ILUMINARC® presents the information contained in the Troubleshooting Table as a guide only. In most cases, opening the product's housing will invalidate its warranty, unless there is a written indication to the contrary.



Always dry the external optics and glass surfaces carefully after cleaning them.



If you still experience technical problems after trying the solutions in the Troubleshooting Table, contact ILUMINARC® Technical Support.

Troubleshooting Guide

| Symptom | Cause(s) | Action(s) |
|---|-------------------------------------|--|
| General low light intensity | Dirty lens assembly | Clean the product regularly |
| | Misaligned lens assembly | Return for service to Iluminarc® |
| No LED illuminates | Faulty LED PCB | Return for service to Iluminarc® |
| | Faulty LED patch cable | Return for service to Iluminarc® |
| | Faulty LED driver | Return for service to Iluminarc® |
| One LED does not illuminate | Faulty LED | Return for service to Iluminarc® |
| | Faulty LED patch cable | Return for service to Iluminarc® |
| | Faulty LED driver | Return for service to Iluminarc® |
| Circuit breaker/fuse keeps tripping/blowing | Excessive circuit load | Check total load placed on the electrical circuit |
| | Short circuit along the power wires | Check for a short in the electrical wiring |
| Product does not power up | No power | Check for power on power outlet |
| | Loose or damaged power cord | Check power cord |
| | Blown fuse | Replace fuse |
| | Faulty internal power supply | Return for service to Iluminarc® |
| Product does not respond to DMX | Wrong DMX addressing | Check Control Panel and product addressing |
| | Damaged DMX cables | Replace DMX cables |
| | Wrong polarity on the controller | Check polarity switch settings on the controller |
| | Loose DMX cables | Check cable connections |
| | Faulty DMX interface | Return for service to Iluminarc® |
| | Faulty Display/Main board | Return for service to Iluminarc® |
| DMX signal problems | Non DMX compliant cables | Use only DMX compatible cables |
| | Bouncing signals | Install terminator as suggested |
| | Long cable / low level signal | Install an optically coupled DMX splitter right after the product with the strong signal |
| | Too many products | Install an optically coupled DMX splitter after product #32 or before |
| | Interference from AC wires | Keep DMX cables separated from power cables or fluorescent/black lights |

LED Disclaimer

LED Life

ILUMINARC® rates LED lifetime based on lumen depreciation of 70% of the original output, with data provided by the manufacturer of the LED. Data from the manufacturer of the LED are not independently verified or measured by ILUMINARC®. When the product is operating in optimal environmental conditions, the LED lifetime is rated to be 50,000 to 70,000 hours by the LED manufacturer.

LED Binning

LED manufacturers sort LEDs into “bins”, based on variances in color, output intensity and the frequency at which the semiconductor operates. ILUMINARC® strives to hold its LED manufacturers to the highest standards of binning to optimize consistency in output from product to product. However, the availability of a single bin cannot be guaranteed. With that in mind, ILUMINARC® has developed a rigorous control system to seek the best achievable consistency in color and output.

Color Rendering Index (CRI)

CRI is an industry standard method to compare properties of different types of light sources. There are known limitations and inconsistencies related to CRI. Results may vary depending on the environmental factors involved. For this reason, the US Department of Energy (DOE) states that CRI should be considered as one point of reference among others in evaluating white LED products and systems.

The following is an excerpt of recommendations from the DOE:

1. Identify the visual tasks to be performed under the light source. If color fidelity under different light sources is critically important (for example, in a space where color or fabric comparisons are made under both daylight and electric lighting), CRI values may be a useful metric for rating LED products.
2. CRI may be compared only for light sources of equal CCT. This applies to all light sources, not only to LEDs. Also, differences in CRI values of less than five points are not significant, e.g., light sources with 80 and 84 CRI are essentially the same.
3. If color appearance is more important than color fidelity, do not exclude white light LEDs solely on the basis of relatively low CRI values. Some LED products with CRIs as low as 25 still produce visually pleasing white light.
4. Evaluate LED systems in person and, if possible, on-site when color fidelity or color appearance are important issues.

Source: DOE publication: PNNL-SA-56891, January 2008

Returns Procedure

The user must send the merchandise prepaid, in the original box, and with its original packing and accessories. ILUMINARC® will not issue call tags.

Call ILUMINARC® and request a Return Merchandise Authorization Number (RMA #) before shipping the product. Be prepared to provide the model number, serial number, and a brief description of the cause for the return.

The user must clearly label the package with a Return Merchandise Authorization Number (RMA #). ILUMINARC® will refuse any product returned without a RMA #.

Once you receive the RMA #, please include the following information on a piece of paper inside the box:

- Your name
- Your address
- Your phone number
- The RMA #
- A brief description of the problem

Be sure to pack the product properly. Any shipping damage resulting from inadequate packaging will be the customer's responsibility. As a suggestion, proper FedEx packing or double-boxing is the shipping method ILUMINARC® recommends.



DO NOT write the RMA # directly on the box. Instead,

write it on a properly affixed label.



ILUMINARC® reserves the right to use its own discretion to

repair or replace returned product(s).

Claims

The carrier is responsible for any damage incurred during shipping. Therefore, if the received merchandise appears to have damages caused during shipping, the customer must submit the damage report and any related claims with the carrier, not ILUMINARC®. The customer must submit the report upon reception of the damaged merchandise. Failure to do so in a timely manner may invalidate the customer's claim with the carrier.

For other issues such as missing components or parts, damage not related to shipping, or concealed damage, the customer must make claims to ILUMINARC® within seven (7) days of receiving the merchandise.



Always keep the original box and all packaging material as you

will need those to ship the product back to ILUMINARC®.

Contact Us

World Wide

General Information

ILUMINARC®
5200 NW 108th Avenue
Sunrise, FL 33351
Voice: (954) 923-3680
Fax: (954) 929-5571
Email: info@iluminarc.com

Customer Support

Voice: (954) 923-3680 (ext. 4000)
Fax: (954) 756-8015
Email: tech@iluminarc.com

World Wide Web

www.iluminarc.com

Technical Specifications

| Dimensions and Weight | Length | Width | Height | Weight |
|-----------------------|------------------|-----------------|----------------|-----------------|
| | 12.7 in (323 mm) | 9.0 in (226 mm) | 2.7 in (68 mm) | 6.2lbs (2.8 kg) |

Note: Dimensions in inches rounded to the nearest decimal digit.

| Electrical | Power Supply Type | Range | Voltage Selection |
|------------|----------------------|---------------------|-------------------|
| | Switching (internal) | 100~240 V, 50/60 Hz | Auto-ranging |

| Parameter | 120 V, 60 Hz | 230 V, 50 Hz |
|----------------|---------------|---------------|
| Consumption | 180 W (1.5 A) | 161 W (0.7 A) |
| Inrush current | .4 A | .6 A |

| Power I/O | Input | Output |
|------------|--------|--------|
| Connectors | IEC | N/A |
| Cord plug | Edison | N/A |

| Light Source | Type | Power | Lifespan |
|--------------|------|-------|----------|
| | N/A | N/A | N/A |

| Color | Quantity | Current |
|-----------------------|----------|---------|
| Determined by Product | N/A | N/A |

| Photo Optic | Parameter | Optics |
|-------------|-------------------|--------|
| | Illuminance @ 5 m | N/A |
| | Beam angle | N/A |
| | Field angle | N/A |

| Thermal | Max. External Temperature | Cooling System |
|---------|---------------------------|----------------|
| | 104° F (40° C) | Convection |

| DMX | I/O Connectors | Connector Type | Channel Range |
|-----|----------------|----------------|-----------------------------|
| | CAT 5 | Sockets | 1, 2, 3, 4, 5, 6, 9, 12, 15 |

| Ordering | LQIGIC™ 4X36 |
|----------|--------------|
| | 34x36001 |



ILUMINARC®
5200 NW 108th Avenue
Sunrise, FL 33351 U.S.A.
Tel.: (954) 923-3680
www.iluminarc.com

LOGIC™ 4X36 User Manual Rev. 8
May 2013

ILUMINARC®